

ZOLUTIONS

Vi skaber [...] rum

Zoey **Operating instructions**

Operating intructions



General instruction concerning product use

Office chairs and armchairs must be used according to their assignment and with due care.

Using the chair in any other way (standing, sitting on armrests etc.) is a risk and may end in an accident.

Some remarks on proper chair use:

1. The height and depth of the seat should be adapted to the height of the user so that the whole surface of the profiled seat is occupied. Only then the proper support is ensured for the back.
2. The backrest should at all times support the user's spine, which is why special attention should be paid to the support of the lumbar part.
3. Frequent changes of the seat position during which the chair moves accompanying the moves of the sitting person are recommended.

SERVICE AND GUARANTEE

NOTE:

Only specialized personnel should perform all repairs connected with the exchange of mechanical parts and shock absorbers.

The chairs with their properly profiled backrest and seat and used regulation mechanism fulfill the ergonomic requirements – they let achieve a proper seating position in which the spine can keep its natural shape.

Other remarks:

LEATHER

Leather is a natural material.

All scratches, scars, insect pricks, differences in the texture and shades are natural and do not lower its quality. Proper maintenance should be performed with the use of special agents creating a protection layer, resistant against water and oil substances.

UPHOLSTERY

Only delicate cleaning liquids should be used when removing any dirty spots.

PLASTIC ELEMENTS

Any agents based on soap are proper for cleaning plastic elements.

www.zolutions.dk

Operation:

- furniture should be protected from direct sunbeam.
- leather furniture should not be placed close to any heating. Minimal distance from source of heat is 30 cm.
- avoid humidity.
- protect the upholstery against fat, sweat, grease, etc. If dirty, use appropriate cleaners.
- products should be vacuumed at least once a year.
- hard castors are dedicated for soft floors (carpets).
- soft castors are dedicated for hard floors (panels, PVC, parquets).
- It is necessary to follow the conditions below of use of the products with wood/plywood elements:
 - temperature range $+15 \div 30$ °C,
 - moisture range $40 \div 65\%$.

Please pay attention to avoid of scratching the surface of wooden elements by desks or other office elements. Any mechanical damages are not considered as product defects.

ZOLUTIONS

Vi skaber [...] rum



A

Height of the seat

- ▶ Lowering the seat
 1. Sit down on the seat.
 2. Pull the lever upwards (the seat will drop slowly).
 3. Release the lever at the desired height and lock the position.
- ▶ Raising the seat
 1. Stand up.
 2. Pull the lever upwards (the seat will rise slowly).
 3. Release the lever at the desired height



B

Reclining force of backrest

- ▶ By loosening the screw you will decrease the reclining force, adjusting the chair to persons with small body weight.
- ▶ By tightening the screw you will increase the reclining force, adjusting the chair to persons with high body weight.



ZOLUTIONS

Vi skaber [...] rum



C

Backrest and seat tilt angle

► Adjustment of the angle of the backrest and the seat:

1. Activate the SFL MAX mechanism by turning the knob forward and hold it in this position.
2. Apply pressure on the backrest to unlock the mechanism, then lean forward until the seat and backrest are tilted.
3. Release the knob and the mechanism will automatically lock in.
4. To return to the starting position, turn the knob forward, hold it in this position, apply pressure to the front of the seat to unlock the mechanism, then lean back until the seat and backrest return to the starting position.



D

Angle of the backrest and the seat

► Adjustment of the angle of the backrest and the seat:

1. Apply pressure to the backrest and lean back until the desired seat and backrest position is achieved.
2. By turning the knob backwards you will lock the backrest and seat in one of 5 positions.
3. Release the knob. The seat will lock in the selected position.
4. Turning the knob to the middle position will return the backrest and seat to the starting position.

E

Seat depth

► Seat depth adjustment:

1. Pull the lever outwards and at the same time move the seat with your thighs.
2. At the selected seat depth, release the lever and mechanism will lock in.

